
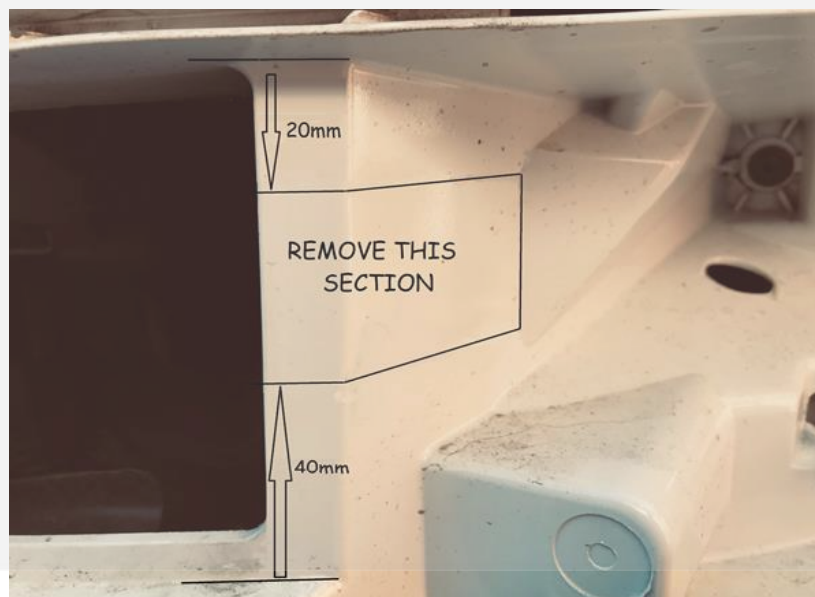


TRANSPORTER T5.1 2010-2015 DRL KIT

1. Remove the bumper trim panels from the vehicle, use a trim tool or an equivalent. Avoid damaging your bumper or any retaining clips. **DO NOT FORCE OR USE A SCREWDRIVER!**
2. Always disconnect the negative battery terminal when working on your vehicle
3. Cut away the areas highlighted below on both sides of your bumper. *Ensure you don't cut too much away or any clips.*

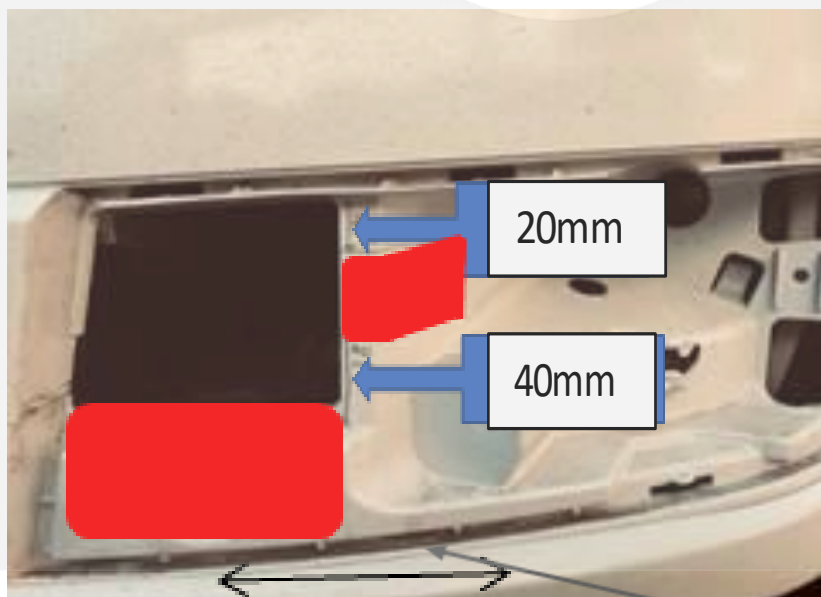

Ensure you leave the recess to allow the unit to clip into the lower edge of the bumper

1. All wiring must be secured to the vehicle, away from any moving or hot parts
2. Connect the **Red** wire from the DRL kit. Using a splice clip supplied to the grey wire with the red stripe (pin 4) from the back of the headlight plug.
(Some vehicle wiring colours or pin numbers may differ. Check this is a driving light bulb live feed)
3. Connect the **Blue** wire from the DRL kit to the yellow wire with a black stripe (pin 6) from the back of the headlight plug
(using a splice clip provided & check this is a live feed for dipped beam bulb as some vehicles differ)
4. Connect the Black wire from the DRL kit to the negative battery terminal or earth
5. Reconnect the battery
6. Mount the control box in a position suitable such as within the battery cover housing under the bonnet

Trouble shooting

If your DRL's do not illuminate, check all connections and splice clips cut through to the wire cores
Check your earth/negative connection.