




VW TRANSPORTER T6 2015> DRL KIT

1. Remove the bumper trim panels using a trim removal tool. Avoid damaging your bumper or any retaining clips or paint
2. Always disconnect the negative battery terminal when working on your vehicle
3. Cut away the areas highlighted on both sides of your bumper. *Ensure you don't cut too much away or any clips.* Connect the **Red** wire from the DRL kit. Using a splice clip or solder and heat shrink can also be used to the **white wire**
4. **(pin 4)** from the back of the headlight plug
5. Connect the **Blue** wire from the DRL kit to the **white wire with a red stripe (pin 10)** from the back of the headlight plug
6. Connect the **Black wire** from the DRL kit to the **negative battery terminal or earth**

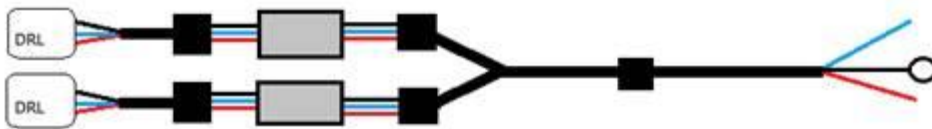

Reconnect the battery. All wiring must be secured to the vehicle, **away from any moving or hot parts.**

Trouble shooting

If your DRL's do not illuminate, check all connections and splice clips cut through to the wire cores
Check your earth/negative connection.